 


OPERATING MANUAL

Aurora A400-Basic

Important: Please read the instruction manual carefully prior to installation and keep it for future reference.






Ordering code	Product Fitting series		Function Description
A400 18 000	A400	18	Basic LED

Mounting: Wall or Ceiling Light brief features: Ra: >80 Life Time: 5 years

 Light Source: LED SMD2835 Input:220V-240V 50/60Hz




Accessories


No.	Pic.	Qty.	Usage	
1	0	3	Fix light	
2		3	Rawl plug	
3		1	Rubber plug	

Color temperature code:

Code	Color temperature	CCT(K)	Lumen
30K	Warm White	3000	1940
40K	Natural White	4000	1980
50K	Cool White	5000	2005

Installation

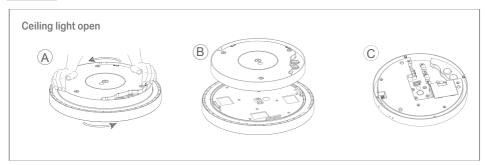

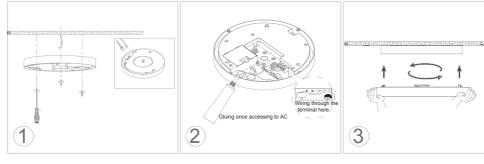

Maintenance

- 1. Cut off the main power first
- 2. Don't touch LED while maintaining or cleaning
- 3. Don't use chemical reagent to clean lamp.







Environmental protection: waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

Caution:

- 1. The product must be installed by professional technicians and power supply must be cut off before installation.
- 2. The diameter for AC input wire is 0.75mm² (complying with 60245 IEC57), which complies with the latest IEE electrical standards or national standards.
- 3. Do not touch the electronic circuit and its components.
- 4. Contact an authorised technical service centre for any repairs possibly required use only original spare parts.
- 5. Do not touch LED while installing or maintaining.
- 6. Sealing the entrance hole with glue after install is needed.
- 7. The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

















