 


# **OPERATING MANUAL**

# Ultra U400 - Basic On/Off

 
Important: Please read the instruction manual carefully prior to installation and keep it for future reference.






С	Ordering Code	Product Series	Power	Function Description
ι	J400 36 000	Ultra U400	36W	Basic On/Off

Mounting: Ceiling Light features: Ra: >80 Life Time: 5 years Light Source: LED SMD2835 Input: 220V-240V 50/60Hz




## Wiring

 


### **Accessories**

No.	Pic	Qty.	Usage	
1	0	4	Fix light	
2	$\Rightarrow$	4	Rawl plug	
3	0	4	4 Plastic washer	
4		1	Vandal proof screw tool	


#### Installation

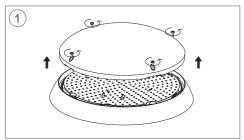


Twist the diffuser anticlockwise. Vertically remove the diffuser.

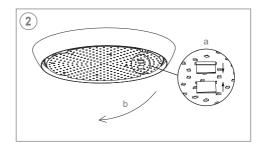

Press the clip to release the PCBA vertically as shown.

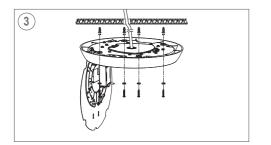


- a. Cut off the power. Thread the input cable through the rubber plug to the fixture. Connect the wire referring to the wiring diagram.
- b. Knock the rawl plugs into the pre-drilled holes on ceiling /wall. Wear plastic washers on self-tapping screws and tighten them to fix the fixture on ceiling/wall.

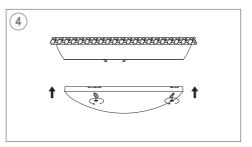

Mount the diffuser onto the base with screws. Resume the power.

#### Maintenance

 - 1. Cut off the main power first.
- 2. Don't touch LEDs while maintaining or cleaning.
- 3. Don't use chemicals to clean the fixture.



Environmental protection: waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

#### Caution

- 1. The product must be installed by professional technicians and power supply must be cut off before installation.
- The diameter for AC input wire is 0.75mm<sup>2</sup> (complying with 60245 IEC57), which complies with the latest IEE electrical standards or national standards.
- 3. Do not touch the electronic circuit and its components.
- 4. Contact an authorised technical service centre for any repairs possibly required use only original spare parts.
- 5. Do not touch LED while installing or maintaining.
- 6. Sealing the entrance hole with glue after install is needed.
- 7. The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

